



Notice

The information contained in this document is subject to change without notice.

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Intel®and Pentium®are registered trademarks of Intel Corporation. Microsoft®, Windows NT®, and Windows 2000®are registered trademarks of Microsoft in the U.S. and other countries. Torx® is a registered trademark of CamCar/Textron, Incorporated.

Hewlett-Packard Company  
Network Server Division  
Technical Communications  
10955 Tantau Avenue  
Cupertino, California 95014 USA

© Copyright 2002, Hewlett-Packard Company.



HP Server

tc2110

Installation Sheet

Audience Assumptions

This guide is for the person who installs, administers, and troubleshoots LAN servers. Hewlett-Packard Company assumes you are qualified in the servicing of computer equipment and trained in recognizing hazards in products with hazardous energy levels. The instructions in this document are provided in greater detail in the *HP Server tc2110 Operation and Maintenance Guide*.

Configuring the HP Server

1. Check/set the Power Supply Input Voltage Switch:

☐

☐

☐

☐

☐

☐

☐

☐

☐
2. Connect all peripherals:

☐

☐

☐

☐

☐

☐

☐

☐

☐
3. Run Diagnostics (Optional):

☐

☐

☐

☐

☐

☐

☐

☐

☐
4. Install the desired Network Operating System (NOS).

☐

☐

☐

☐

☐

☐

☐

☐

☐
5. Refer to the HP Server Documentation CD-ROM:

☐

☐

☐

☐

☐

☐



☐

☐

☐


Setting Up the HP Server

# Familiarize Yourself

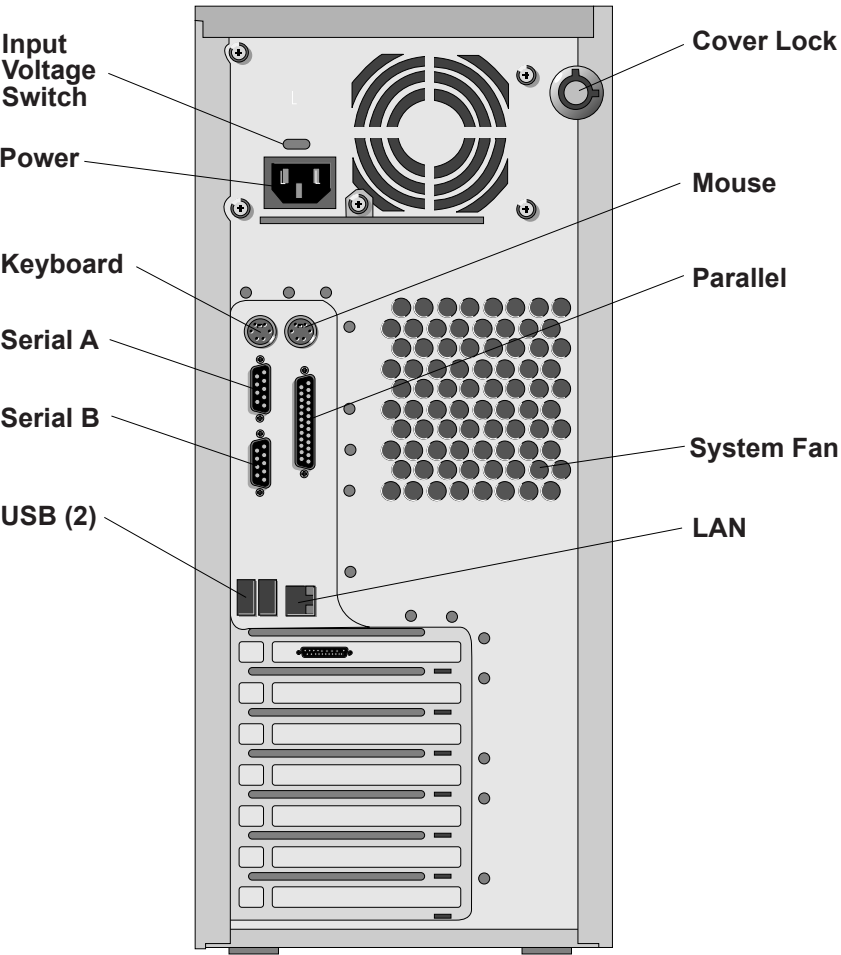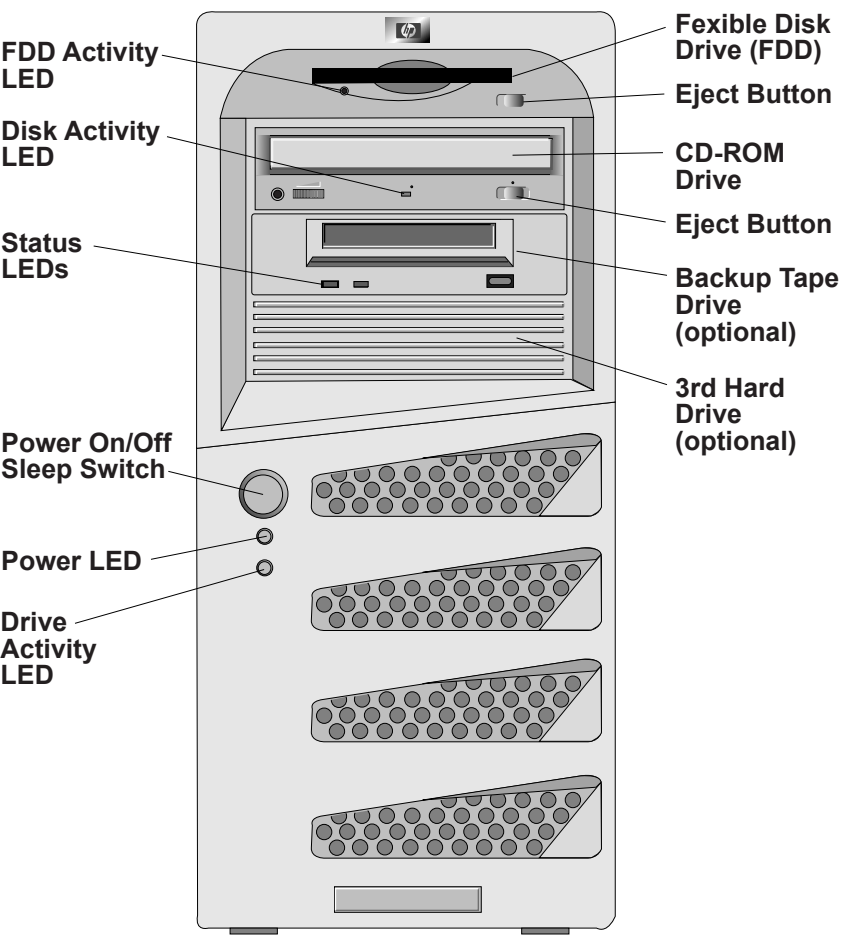


**CAUTION** The keyboard and mouse PS/2 ports are not interchangeable. If a device is attached to the incorrect port, the boot process will not complete.



# Familiarize Yourself (continued)

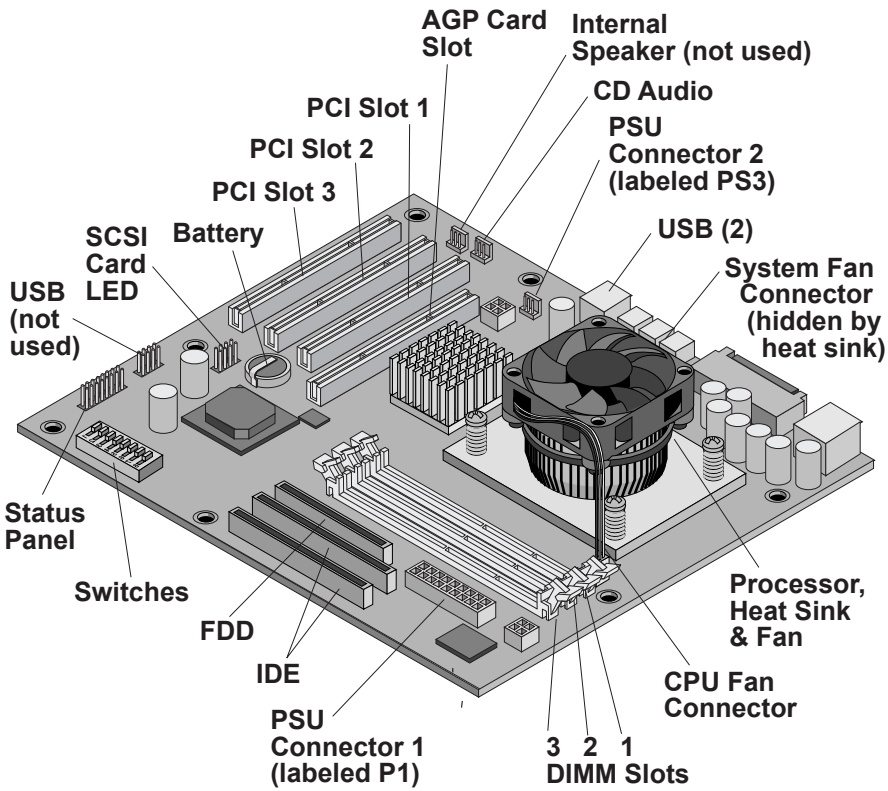


# Opening the HP Server

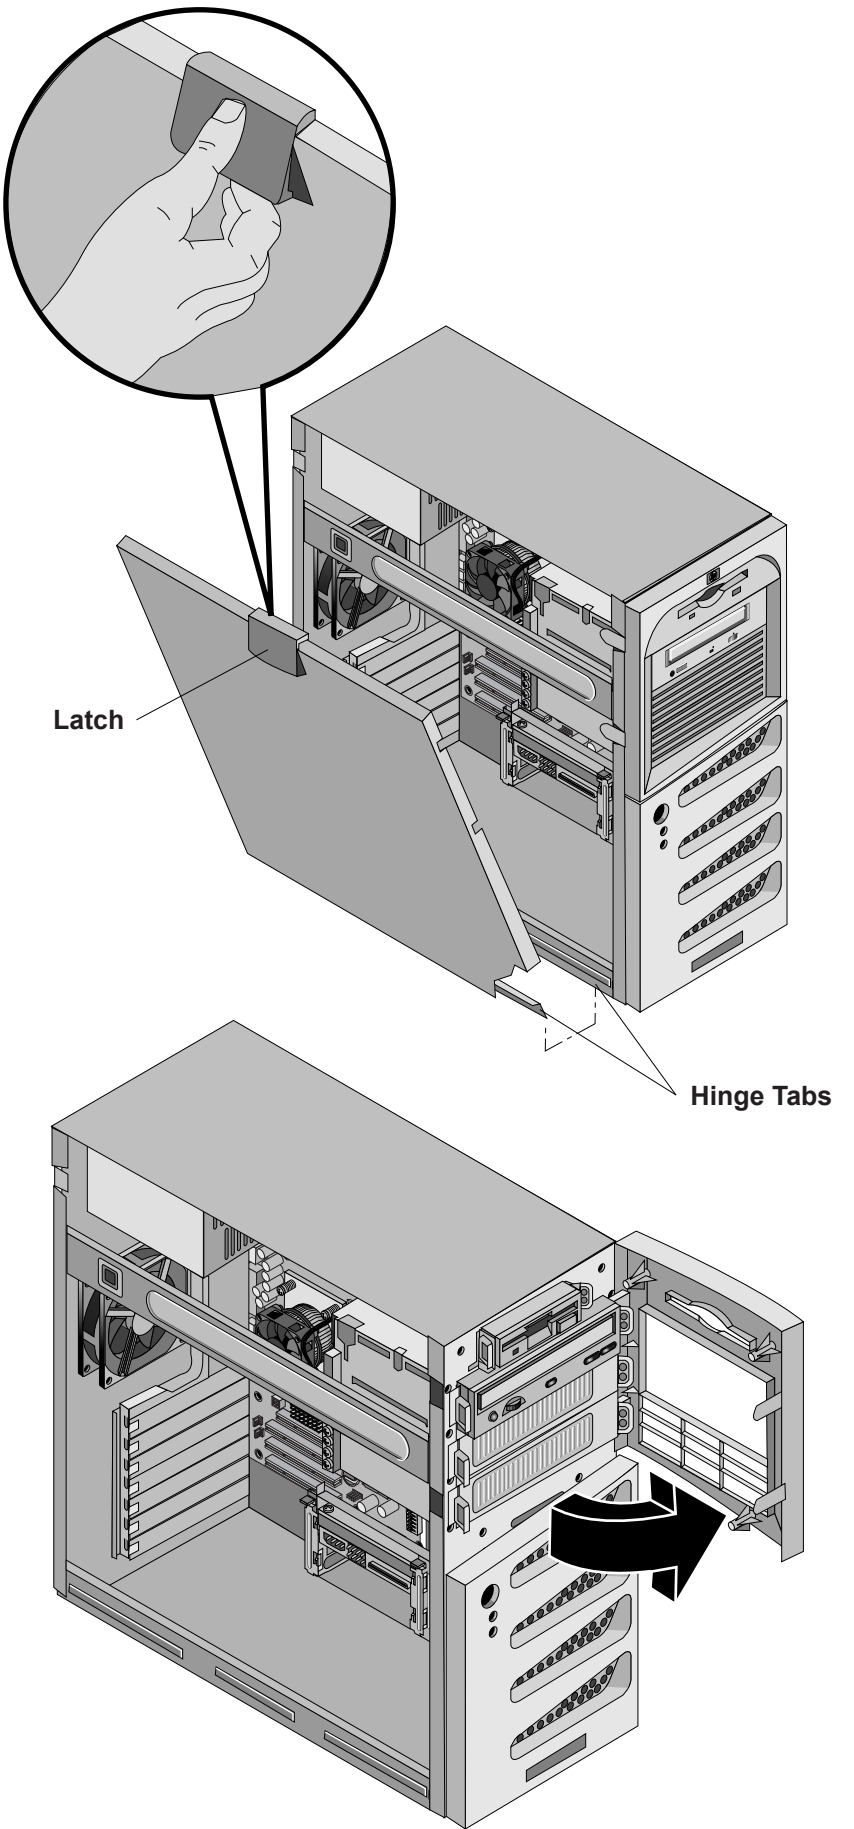

## Installing Mass Storage Devices

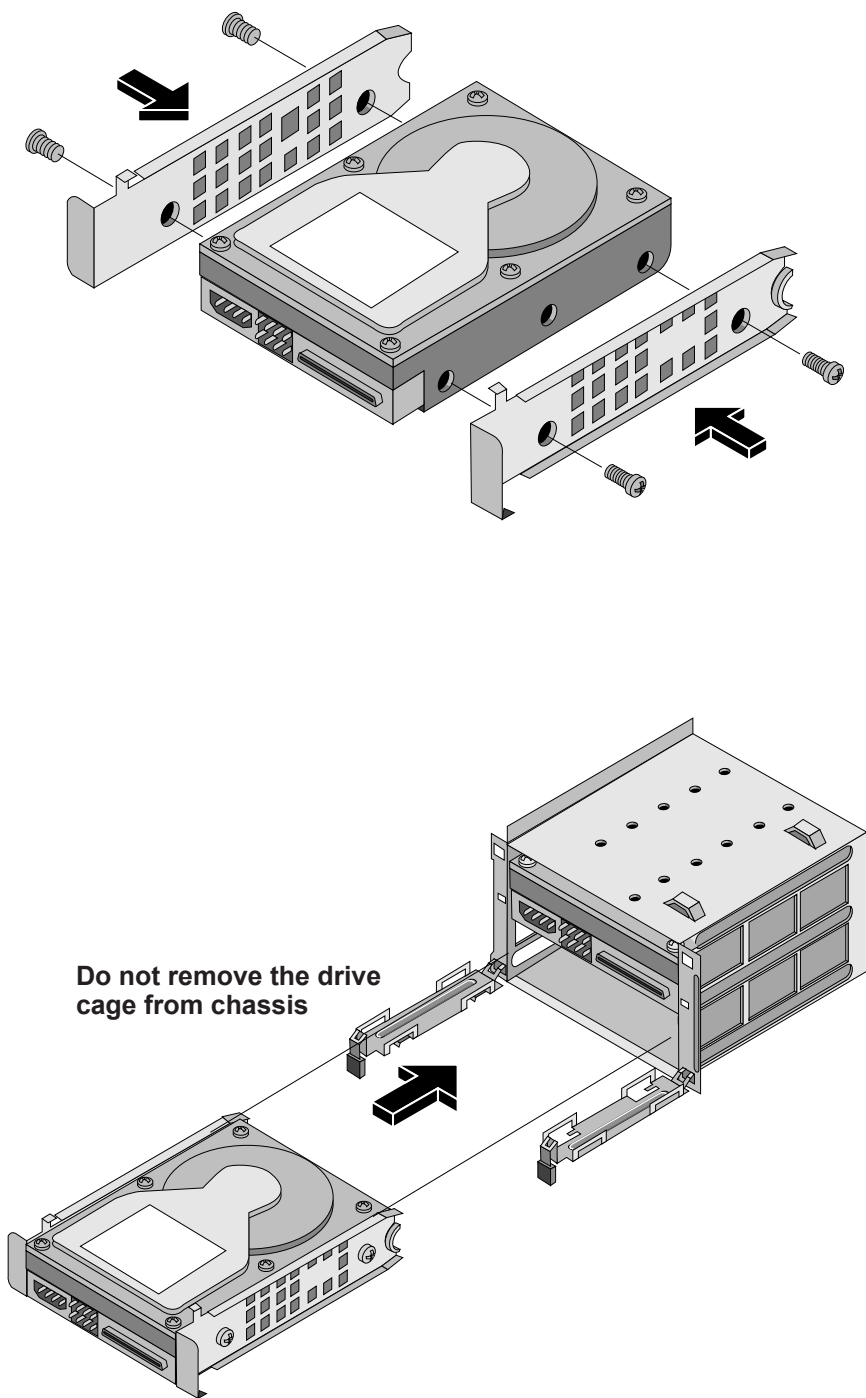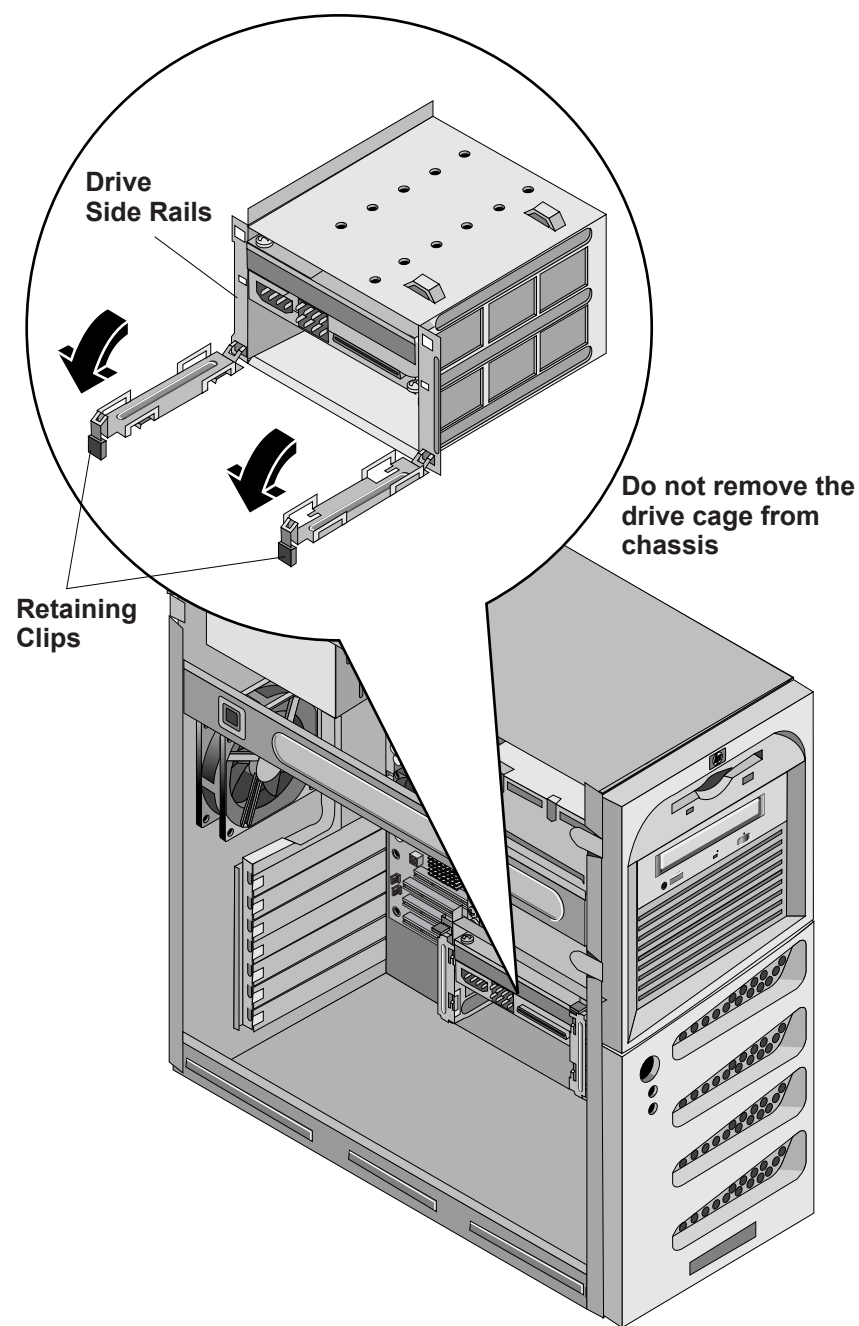


## Installing Mass Storage Devices (continued)

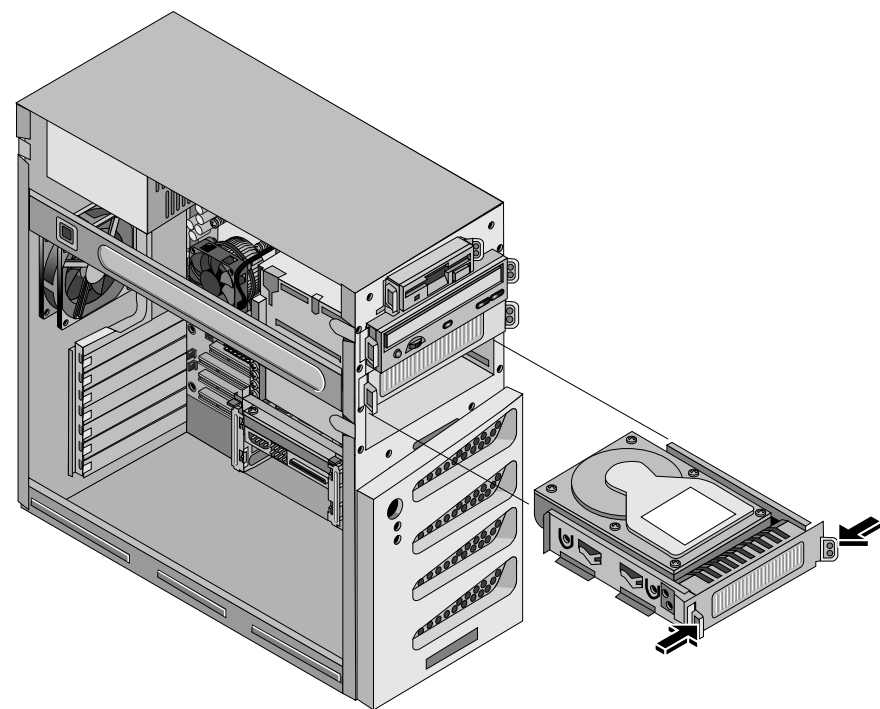


**CAUTION** ☐ Drives can be damaged by static electricity. Before handling drives, touch an unpainted metal surface to discharge static electricity.

**CAUTION** ☐ Always insert a filler panel into empty slots. Operating with empty drive slots could cause thermal damage to the HP server.

## Replacing the Processor

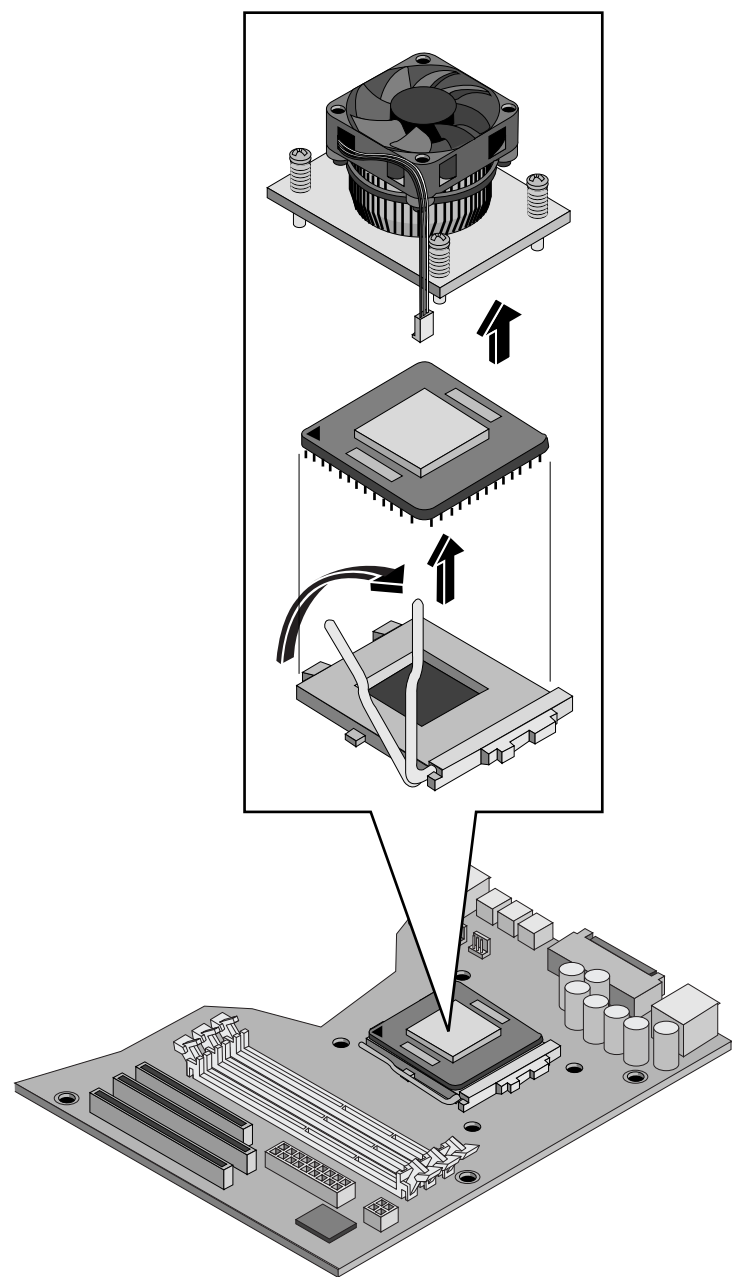


## Replacing the Processor (continued)

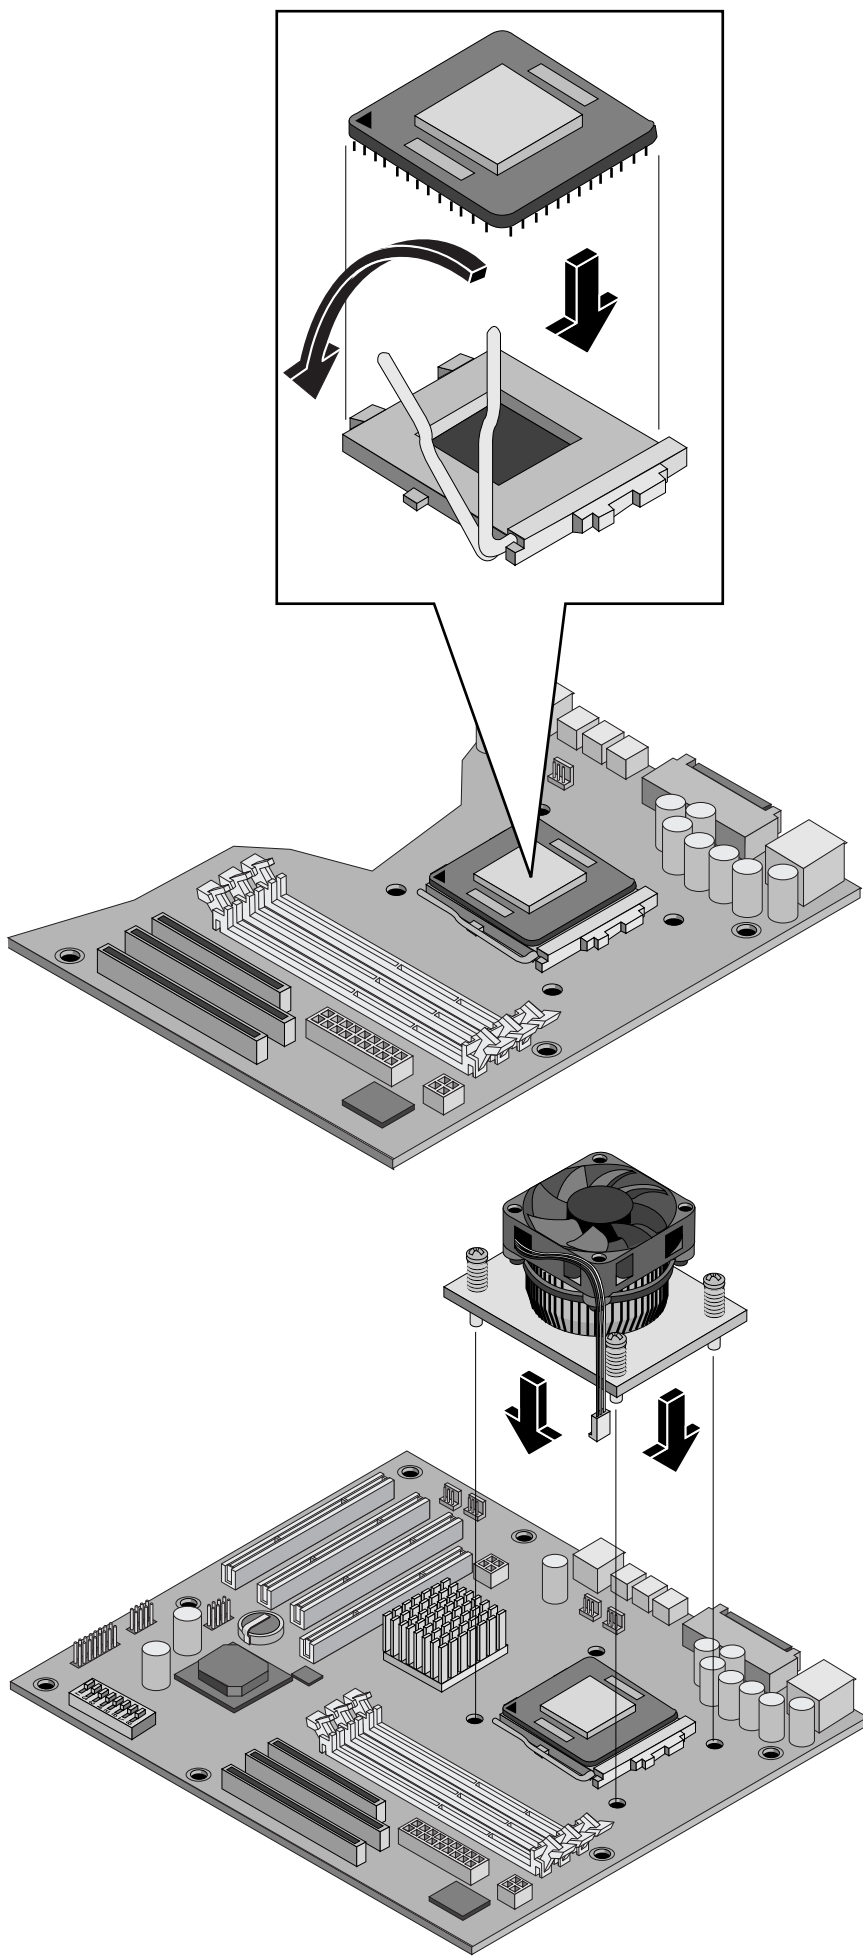

**CAUTION** □ Align pin 1 on the processor with pin 1 on the processor socket, or pin damage will occur.


## Installing Memory

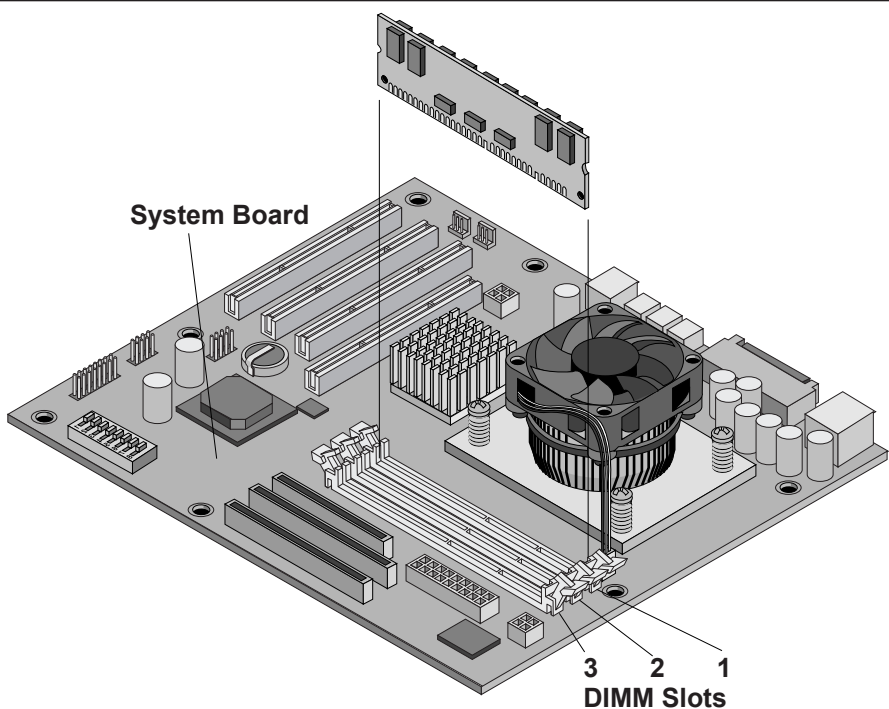

**CAUTION** □ Use only HP PC133 MHz unbuffered, ECC, SDRAM DIMMs.

**CAUTION** □ DDR DIMMs can be damaged by improper handling. Always use an antistatic wrist strap and grounding mat, and discharge static electricity before touching DDR DIMMs.

## Installing PCI Accessory Boards

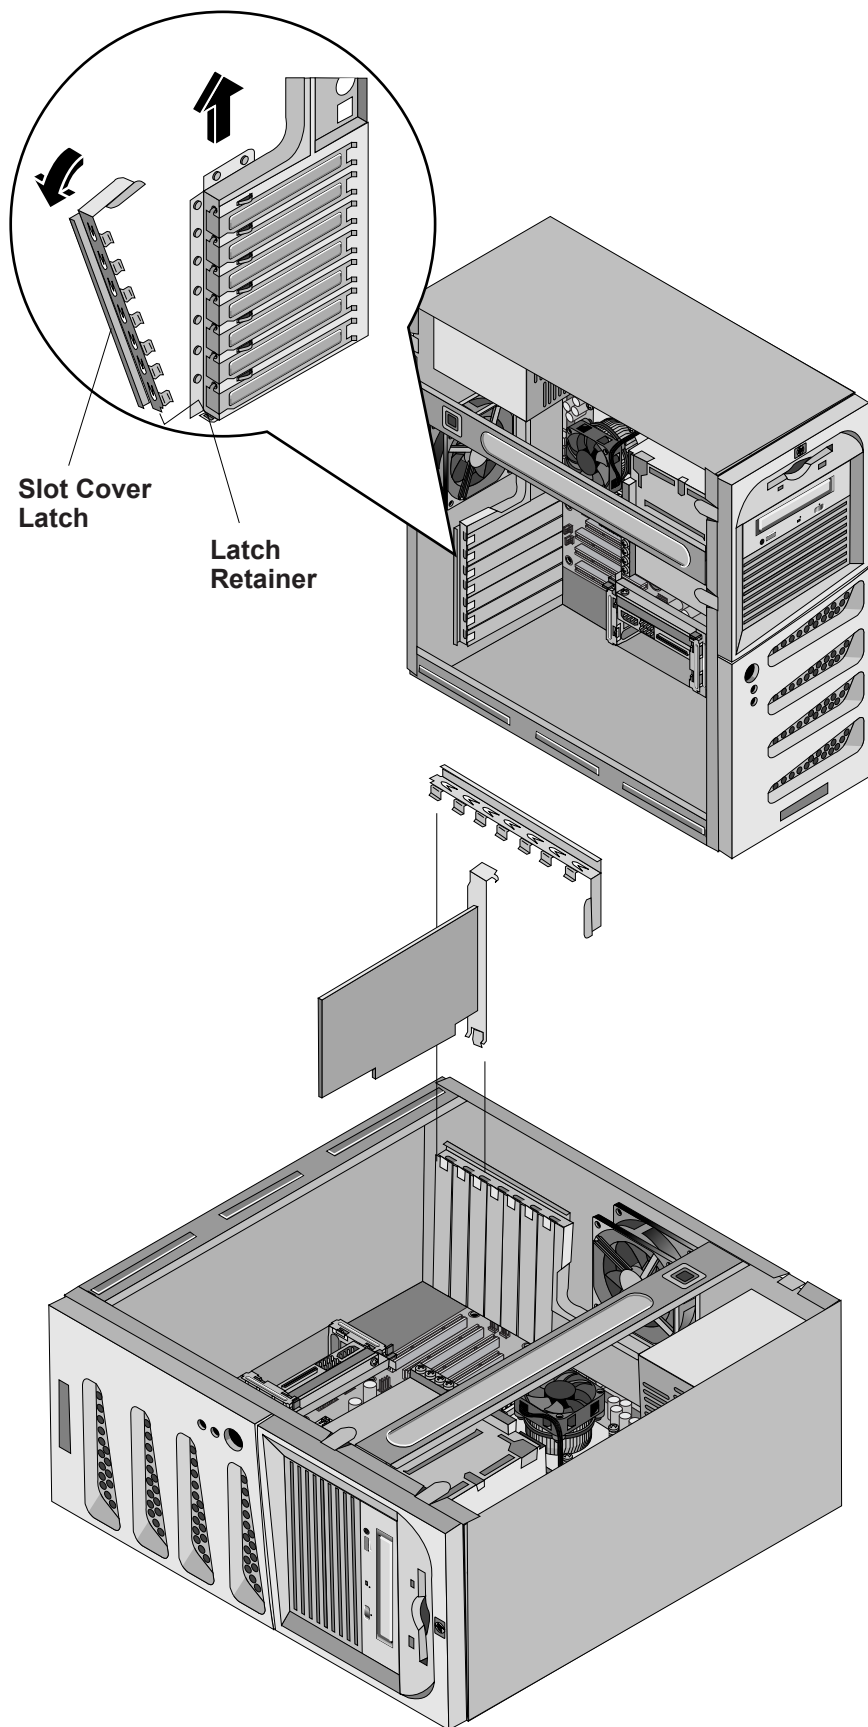

## Boot Priority

By default, the server searches for boot devices in this order:

- 1. Flexible disk drive
- 2. IDE CD-ROM drive
- 3. IDE hard drive
- 5. PCI slot 1
- 6. PCI slot 2
- 7. PCI slot 3

## Obtaining Additional Documentation

For additional documentation refer to your *HP Server Documentation CD-ROM*. You can also access additional information and documentation from HP's external web site, either by connecting directly or through your *HP Server Documentation CD-ROM*.